



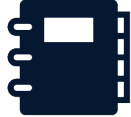



Pre-Task	<ul style="list-style-type: none"> • Consider the task and follow safe job procedures, industry best practices, and legislative requirements. • Complete a hazard assessment and follow the controls. • Inspect all equipment. Ensure blades are in the proper position. • Ensure all maintenance and lubrication has been completed. • Use the required PPE such as safety glasses, hearing protection, long pants, and steel-toed footwear.
During	<ul style="list-style-type: none"> • Ensure all rocks and sharp objects are removed. • Use caution when moving around equipment. • Do not service or fuel running or hot equipment. Ensure proper fuel is used. • Ensure that guards and protective equipment devices are in place as per manufacturers' requirements.
Post-task	<ul style="list-style-type: none"> • Clean up area and secure all tools and equipment in a dry clean location after use.

Task/Environment/Equipment	
Roto Tillers and Edgers	
Protective Measures	
SSHA	
Engineering	
Training	
SJP	
ERP	
PPE	

The information presented in this publication is intended for general use and may not apply to every circumstance. It is not a definitive guide to OHS legislation or industry standards. This does not relieve persons using this publication from their responsibilities under applicable legislation. The Alberta Construction Safety Association does not guarantee the accuracy of, nor assume liability for, the information presented here.

Icons from The Noun Project: *warning-clipboard* by Suncheli Project, *secure* by Markus, *training* by Musmellow, *checklist* by Vectors Market, *agenda* by Rflor, *safety glasses* by André Renault